



**FA62T-8MB**


# INSTALLATION INSTRUCTIONS

1. Install enclosure per instructions provided. Extend service loop at least 6" beyond bottom lip of enclosure
2. Terminate service loop to red & black leads on motorboard
3. Install motorboard into enclosure with screws provided
4. Select wattage tap via front selector switch
5. Install original FA series grille

**FA62T-8MB**

Frequency Response: 90Hz - 20kHz

 Sensitivity: 88dB (1W/1M)

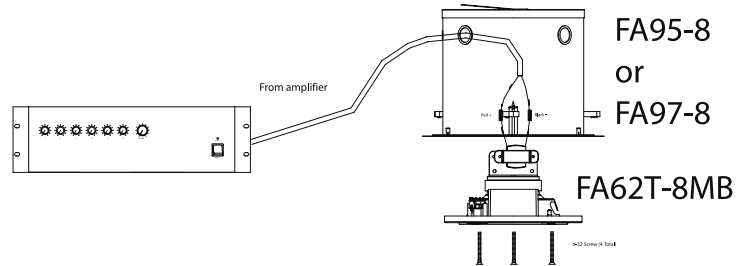

*Specifications are subject to change without notice*



**Atlas  
Sound**

**AtlasSound.com**

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3332 • FAX: (800) 765-3435

©2004 ATLAS SOUND LP

00304

ATS001720 RevA 3/04

PP



**FA62T-8MB**


# INSTALLATION INSTRUCTIONS

1. Install enclosure per instructions provided. Extend service loop at least 6" beyond bottom lip of enclosure
2. Terminate service loop to red & black leads on motorboard
3. Install motorboard into enclosure with screws provided
4. Select wattage tap via front selector switch
5. Install original FA series grille

**FA62T-8MB**

Frequency Response: 90Hz - 20kHz

 Sensitivity: 88dB (1W/1M)

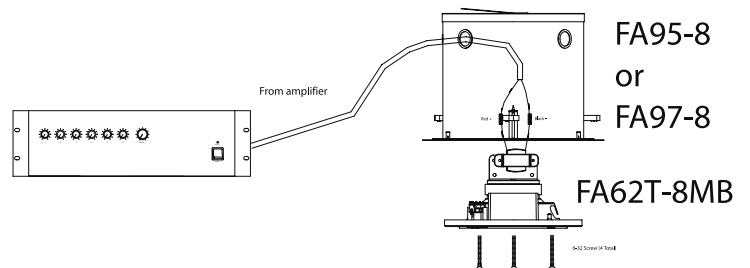

*Specifications are subject to change without notice*



**Atlas  
Sound**

**AtlasSound.com**

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3332 • FAX: (800) 765-3435

©2004 ATLAS SOUND LP

00304

ATS001720 RevA 3/04

PP